



ECpvh

SW update Guide



Document change log	2
Introduction	3
Before updating the SW	3
Updating via USB	3
Requirements	4
Recipe	4
Updating via SD card	6
Requirements	6
Recipe	6

Document change log

2021-04-26	First version
2021-09-20	Updated to release 1.01.0

Introduction

This document explains the options available for updating the SW in the ECpvh.

Before updating the SW

When the SW is updated all settings will be set to default values and all counters of energy etc. are cleared. If to be able to return/keep the settings and counters after the SW update then backup of Settings and Counters are to be made before updating the SW. The Backup handling is found under the Identifiers menu.

The screenshot shows the ENcombi web interface. At the top left is the ENcombi logo, and at the top right is the word 'ADMIN'. Below the header is a table with the following structure:

Backup	Date	Action
Settings	2021-06-23-11:20:43	
Counters	2021-08-27-14:10:17	

Below the table, there is a 'MAC address:' field with the value '0030569108A2' and a refresh icon. A text box on the right contains the following text:

Device backup page.
Following backups can be made:
1: Settings backup.
2: Counter backup.

The backups are saved and loaded locally on/from the device.
One backup for each function exist only.
Saving a new backup will overwrite any existing backup.

Backups can also be saved and read in/from cloud service.
One backup for each function per device can be saved only.
Reading a backup from cloud service,
will overwrite any existing local backup.

Furthermore backups can be saved on and loaded
from USB memory stick.

To clone a device, backups created from other devices
can be read from the cloud and loaded.
To do so the MAC address of the device to clone from
must be typed in. The refresh button resets to the
MAC address of the device itself.

At the bottom right of the page, the timestamp '2021-08-08-10:07:18' is visible.

Both Settings and Counters backups can be:

1. Generated and stored locally on internal memory of ECpvh.
2. Loaded into ECpv project from internal memory of ECpvh.
3. Copied from internal memory of ECpvh to ENcombi cloud for safe storage.
4. Read from ENcombi cloud to internal memory of ECpvh.
5. Generated and stored on USB-stick.
6. Loaded into ECpvh project from USB-stick.

The backups are to be generated before updating the SW. After the SW update is complete the backups can then be loaded into the ECpv project afterwards.

Updating via USB

This approach is supported from all ECpvh versions.

Requirements

In order to update the ECpvh SW via USB stick the following is required.


- ECpvh application SW from ENcombi.
- Laptop.
- USB stick.

Recipe

The ECpvh application SW is available on the ENcombi website:

<http://www.encombi.com/products/ecpvh/>

- The SW is downloaded as a zip file.
- Create a folder "ECpvh_SW" in the root of a USB stick and copy the content of the zip file into the folder as shown below.

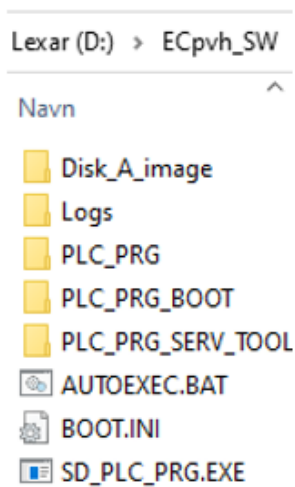

- Stick the USB stick into ECpvh.
- Switch to the Boot application from within ECweb.

Application

Application: ECPVH BOOT



Application swap page.
Here it is set up which application to run.
When toggling between applications, the device is to be reboot. Any settings made in the ECpvh application will be lost in the process. Store a backup before leaving the ECpvh project if any settings are made that is to be restored when reverting to the ECpvh application. Browser needs refreshing when the device has rebooted.

2021-09-20-10:21:35

- Click the binoculars button to start the SW update from the USB stick.



Device project update via USB.

- 1: Create an empty folder on your laptop named ECpvh_SW.
- 1: Download the SW file from the website.
- 2: Unzip the downloaded file.
- 3: Navigate to the SW version folder.
- 4: Copy the content of the SW version folder.
- 5: Paste the content to the ECpvh_SW folder.
- 6: Copy the ECpvh_SW folder to the root of a USB stick.
- 7: Insert USB stick into the device.
- 8: Click the search for SW button.
- 9: Wait for the process to complete.
- 10: If completed successfully then revert to the ECpvh application.



2021-09-20-10:22:06

- Once SW update sequence is completed successfully, switch back to the ECpv application. Do not revert to the ECpvh application in case a SW update attempt is interrupted and failed. In this case make a new SW update and complete it successfully before reverting to the ECpvh application.
- For the first start up it will be approximately 60s until "Run/Stop" LED is illuminated and ECpvh is ready to operate. Thereafter it will be the normal approximately 30s.

Updating via SD card

This approach is supported from all ECpvh versions.

Requirements

In order to update the SW in an ECpvh via SD card the following is required.


- ECpvh application SW from ENcombi.
- Laptop.
- SD card reader.

Recipe

The ECpvh application SW is available on the ENcombi website:

<http://www.encombi.com/products/ecpvh/>

- The SW is downloaded as a zip file.
- Unzip the file and locate the folder structure below.

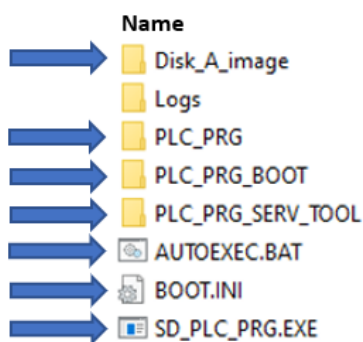

- Power down the ECpvh.
- Remove the SD card from the ECpvh.
- Stick the SD card into your laptop and delete the marked folders and files in the root.
- Paste the same just unzipped folders and files from laptop to the root of the SD card.
- Remove the SD card from your laptop and stick it back into the ECpvh.
- Power up the ECpv. For the first power up it will be approximately 60s until “Run/Stop” LED is illuminated and ECpv is ready to operate. Thereafter it will be the normal approximately 30s.